

Safety precautions to be strictly observed are marked with following symbols in the Operating Instructions:



The instruments must only be disposed of in the correct way!

Operating Instructions

Transmitter for angular position KINAX 3W2



Camille Bauer LTD
Aargauerstrasse 7
CH-5610 Wohlen/Switzerland
Phone +41 56 618 21 11
Fax +41 56 618 35 35
info@camillebauer.com
www.camillebauer.com



57-3W2 Be 997 223-04 06.10

Contents

1. Read first and then	1
2. Brief description	1
3. Scope of supply	1
4. Specification and ordering information	1
5. Technical data	2
6. Mounting	2
7. Electrical connections	3
8. Setting the beginning and end of the measuring range	3
9. Adaptation from 2-wire connection to 3- or 4-wire connection and vice versa	3
10. Reverseing the rotation for instruments with measuring ranges > 150 °	3
11. Dimensional drawings	4
12. Declaration of conformity	4

1. Read first and then ...



The proper and safe operation of the device assumes that the Operating Instructions are **read carefully** and the safety warnings given in the various Sections

6. Mounting

7. Electrical connections

are **observed**.

Unauthorized repair or alteration of the unit invalidates the warranty!

The device should only be handled by appropriately trained personnel who are familiar with it and authorised to work in control technique installations.

2. Brief description

The KINAX 3W2 transmitter converts the angular position of a shaft into a **load independent** direct current signal, proportional to the angular position.

Explosion-proof "**Intrinsically safe Ex ia IIC T6**" versions with I.S. measuring output rounds off this series of transmitters.


3. Scope of supply

Transmitter, one of the six versions (Fig. 1)


3 clamps (Fig. 2)

1 ea. Operating Instructions (Fig. 3) in English, French, German


1 Ex approval (Fig. 3), only for Ex version devices

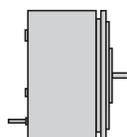


KINAX 3W2 with standard drive shaft at front **only**, Ø 2 mm, length 6 mm.

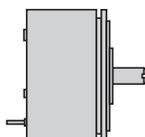


KINAX 3W2 with special drive shaft at front **only**, Ø 6 mm, length 12 mm.

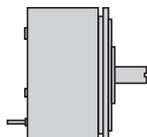


KINAX 3W2 with special drive shaft at front **only**, Ø 1/4", length 12 mm.

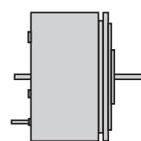

KINAX 3W2 with special drive shaft at front **and** rear. At front: Ø 2 mm, length 12 mm. At rear: Ø 2 mm, length 6 mm.

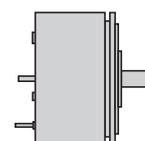

KINAX 3W2 with special drive shaft at front **and** rear. At front: Ø 6 mm, length 12 mm. At rear: Ø 2 mm, length 6 mm.

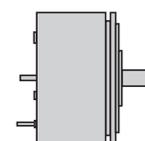

KINAX 3W2 with special drive shaft at front **and** rear. At front: Ø 1/4", length 12 mm. At rear: Ø 2 mm, length 6 mm.

Fig. 1




Fig. 2



Fig. 3

4. Specification and ordering information

Significance of the digits 1. to 4.

Description	Order code
1. Version of the transmitter (with standard drive shaft at front only , Ø 2 mm, length 6 mm, see "Note")	708-
Standard, measuring output non intrinsically safe	1
Ex ia IIC T6, ATEX Measuring output intrinsically safe	2
Customized, (Japan) Measuring output intrinsically safe (on request)	5
Ex ia IIC T6, FTZU Measuring output intrinsically safe (Czech republic)	6
EEx ia IIC T6 BKI (Hungary) Measuring output intrinsically safe	7
2. Sense of rotation	
Calibrated for sense of rotation clockwise	1
Calibrated for sense of rotation counterclockwise	2
V characteristic	3
Calibrated for both senses of rotation and marked	4

Description	Order code
3. Measuring range (measuring input) \ominus	
0 ... 10 \angle °	1
0 ... 30 \angle °	2
0 ... 60 \angle °	3
0 ... 90 \angle °	4
0 ... 180 \angle °	5
0 ... 270 \angle °	6
Non-standard 0 ... \geq 5 to 0 ... < 270 \angle °	9
V characteristic	A
4. Output signal (measuring output) \odot / Connection mode (Power supply 12 ... 33 V DC resp. 12 ... 30 V DC with Ex version)	
0 ... 1 mA / 3- or 4-wire connection	A
0 ... 5 mA / 3- or 4-wire connection	B
0 ... 10 mA / 3- or 4-wire connection	C
4 ... 20 mA / 2-wire connection or 0 ... 20 mA / 3- or 4-wire connection	D
4 ... 20 mA / 3- or 4-wire connection	E
Non-standard / 3- or 4-wire connection 0 ... > 1.00 to 0 ... < 20 mA	Z

Note: The remaining order code digits concern special features, e.g. the drive shaft special, see Fig. 1.

5. Technical data

Measuring input \ominus

Measuring ranges: 0... \geq 5 to 0... \leq 270 \angle °

Preferred range
0...10, 0...30, 0...60, 0...90,
0...180 or 0...270 \angle °

Measuring output \odot

Output variable I_A : Load-independent DC current, proportional to the input angle

Standard ranges: 0...1 mA, 3- or 4-wire connection
0...5 mA, 3- or 4-wire connection
0...10 mA, 3- or 4-wire connection
4...20 mA, 2-wire connection or
0...20 mA, 3- or 4-wire connection adjustable with potentiometer
4...20 mA, 3- or 4-wire connection

Non-standard ranges: 0...> 1.00 to 0...< 20 mA
3- or 4-wire connection

External resistance (load): $R_{\text{ext max.}} [\text{k}\Omega] = \frac{H [\text{V}] - 12 \text{ V}}{I_A [\text{mA}]}$
H = Power supply
 I_A = Output signal end value

Accuracy

Reference value: Measuring range
Basic accuracy: Limit of error \leq 0.5% for ranges 0... \leq 150 \angle °
Limit of error \leq 1.5% for ranges from 0...> 150 to 0...270 \angle °

Power supply H \rightarrow

DC voltage¹: 12...33 V
(possible with standard version, non-Ex)
12...30 V
(necessary with **Ex** version, type of protection "Intrinsic safety" Ex ia IIC T6)

Max. residual ripple: 10% p.p.
Max. current consumption: Approx. 5 mA + I_A

Material

Housing (main part): Metal (aluminium)
Surface chromated

Mechanical withstand

Permissible vibrations: 5 g every 2 h in 3 directions
 $f \leq$ 200 Hz
Shock: 3 \times 50 g
10 shocks each in 3 directions

Admissible static loading of shaft:

Sense	Drive shafts dia.	
	2 mm	6 mm resp. 1/4"
radial max.	16 N	83 N
axial max.	25 N	130 N

Mounting position: Any

Regulations

Test voltage: 500 Veff, 50 Hz, 1 min.
all electrical connections against housing

Housing protection: IP 50 acc. to EN 60 529

Environmental conditions

Climatic rating: **Standard version**
Temperature -25 to + 70 °C
Annual mean relative humidity \leq 90%
or
Version with improved climatic rating
Temperature -40 to + 70 °C
Annual mean relative humidity \leq 95%

Ex version
Temperature -40 to + 60 °C at T6
resp. -40 to + 75 °C at T5

Altitude: 2000 m max.

Transportation and storage temperature: -40 to 80 °C

¹ Polarity reversal protection. The voltage must not fall below 12 V.

6. Mounting

All six versions of the transmitter (Fig. 1) which differ in appearance by the type of shaft can be mounted either **directly** or by means of **3 mounting clips** to the item being measured. Both methods of mounting and the relevant drilling and cut-out plans can be seen from Table 1.

Table 1:

	Mounting versions ²	Drilling and cut-out diagrams for mounting transmitters)
directly		
with 3 clamps		

² For the example of KINAX 3W2 with standard drive shaft at front only, \varnothing 2 mm, length 6 mm.

Three **M3** screws are needed for the "directly" mounted versions and three **M4** screws for those "with clamps". The screws are not supplied, because the required length varies according to the thickness of the mounting surface.



When deciding where to install the transmitter (measuring location), take care that the "Ambient conditions" given in Section "5. Technical data" are **not exceeded**.

Make the cut-out and drill the holes in the item onto which the transmitter is to be mounted according to the **corresponding** drilling and cut-out diagram given in Table 1 and then fit the transmitter.

i Pay attention when aligning and tightening the transmitter that the **transmitter zero** and the **zero** of the item being measured **coincide**.


Alignment is achieved by rotating the transmitter.

To facilitate alignment in the case of **“direct”** mounting, it is recommended to elongate the 3 mounting holes (diam. 3.2 mm).


When using **mounting clips**, the clips permit the transmitter to be rotated to the correct position.

The **electrical zero** of angular transmitters with measuring ranges **0 to ...** \sphericalangle is marked on both the front and the back (see upper illustration). It is only marked on the front, however, in the case of angular transmitters with ranges having a **V characteristic** and at instruments with both senses of rotation, see lower illustration.

Front view

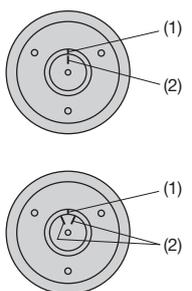

Rear view

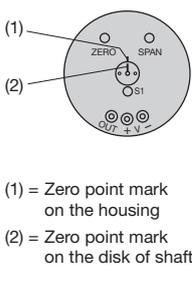

(1) = Zero point mark on the housing
(2) = Zero point mark on the disk of shaft

7. Electrical connections

There are 3 soldering posts (3) on the back of the transmitter for attaching the electrical connections (see Fig. 4). The soldering posts suffice Protection Class IP 00 according to EN 60 529.

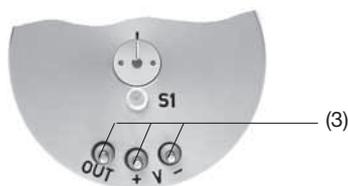


Fig. 4

i Note that, ...

- ... the data required to carry out the prescribed measurement must correspond to those marked on the nameplate of the KINAX 3W2 (Range, Output, Supply voltage)!
- ... the total loop resistance connected to the output (receiver plus leads) **does not** exceed the maximum permissible value $R_{ext.}$! See **“Measuring output”** in Section “5. Technical data” for the maximum values of $R_{ext.}$!
- ... twisted cores must be used for the measured variable input and output leads and routed as far away as possible from power cables!

In all other respects, observe all local regulations when selecting the type of electrical cable and installing them!

In the case of **“Intrinsically safe”** explosion-proof versions with I.S. measuring output, the supplementary information given on the EX approval and also local regulations applicable to electrical installations in explosion hazard areas must be taken into account!

KINAX 3W2	Supply	Range: 0...30°	Camille Bauer AG Aargauerstr. 7 CH-5610 Wohlen Switzerland
Type: 708-112D 0	Voltage	Output: 0/4...20 mA	
Ord: 999/888888/776/997	12...33V	Rotation Sense CW/CCW: >>	

Fig. 5. Example of a nameplate.

Solder the connections as shown in the corresponding wiring diagram (Fig. 6).

i Do not **excessively heat** the soldering posts (3)!
Solder using a **small pencil bit soldering iron**!

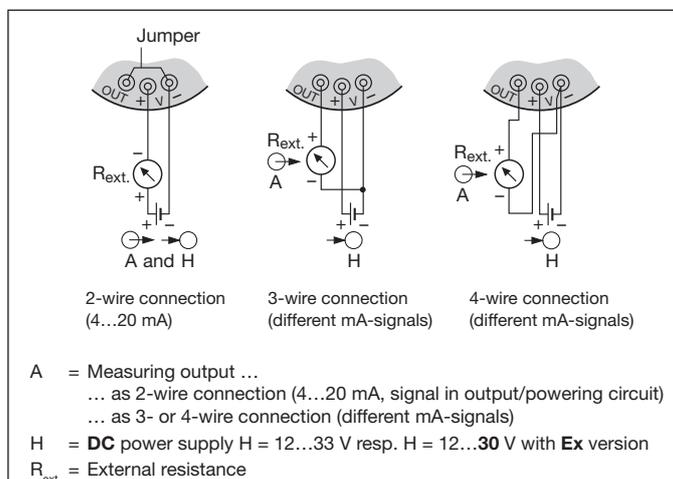


Fig. 6. Connection diagrams for 2-, 3- or 4-wire connection.

8. Setting the beginning and end of the measuring range

The coarse adjustment of the beginning of the measuring range consists in aligning the zero of the measured device with the external zero mark on the transmitter. The procedure was described in Section “6. Mounting”. This Section concerns the **fine adjustment** not only of the beginning of the range (ZERO), but also of the end of the scale (SPAN).

Firstly, switch on the power supply to the transmitter.

Remove the ZERO/SPAN sealing plug (4) (Fig. 7, left). Place the measured device at its **zero position**, i.e. the position at which the KINAX 3W2 should produce 0 mA (3- or 4-wire connection) resp. 4 mA (2-wire connection) at its output.

Should the output current differ by more than 2% from its initial value, repeat the coarse zero setting procedure described in Section “6. Mounting”.

Then adjust the “ZERO” potentiometer (Fig. 7, right) using a watchmaker’s screwdriver (2.3 mm diam.) so that the desired output current flows.

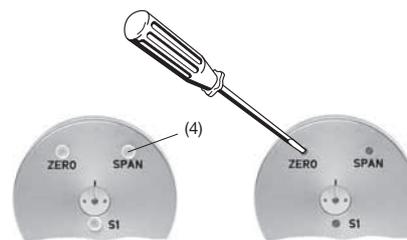


Fig. 7. Adjustments «ZERO», «SPAN» and «S1».
Left: Adjustments covered by the sealing plug (4)
Right: Adjustments exposed.

Now rotate the measured device to its opposite limite position, i.e. the position at which the KINAX 3W2 should produce the prescribed full-scale output current (see rating plate).

Adjust the “SPAN” potentiometer with the screwdriver as before until precisely the prescribed full-scale output current is measured at the output.

Now recheck the zero value and readjust on the ZERO potentiometer and then recheck the full-scale value.

9. Adaptation from 2-wire connection to 3- or 4-wire connection and vice versa

Transmitters with the ordering code 708 - ...D (see Section “4. Specification and ordering information”) are designed for either a 2-wire connection with an output range of 4...20 mA or a 3- or 4-wire connection with an output range of 0...20 mA.

If, however, a transmitter be changed from one to the other (see wiring diagrams in Fig. 6), the beginning and end of the measuring range must be readjusted.

10. Reversing the rotation for instruments with measuring ranges > 150 \sphericalangle

A switch is provided on angular transmitters with a measuring range > 150 \sphericalangle for reversing the direction of rotation. It is marked S1 and can be operated through the opening in the rear part of the transmitter (Fig. 7).

To reverse the direction of rotation, remove the sealing plug (4) covering the switch S1. Then operate the switch by turning it a quarter of a turn with a watchmaker’s screwdriver (2.3 mm \varnothing), and reset the beginning and end of the measuring range.

11. Dimensional drawings

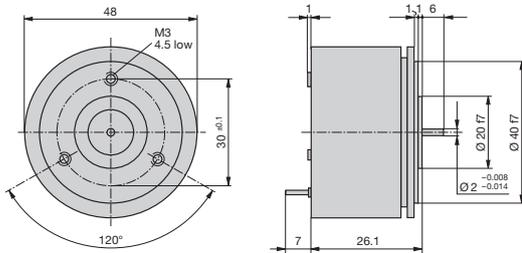


Fig. 8. KINAX 3W2 with standard drive shaft at front **only**, Ø 2 mm, length 6 mm.

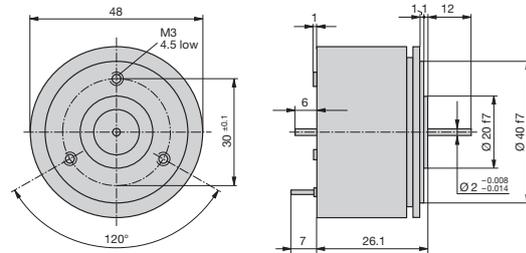


Fig. 9. KINAX 3W2 with special drive shaft at front **and** at rear. At front: Ø 2 mm, length 12 mm. At rear: Ø 2 mm, length 6 mm.

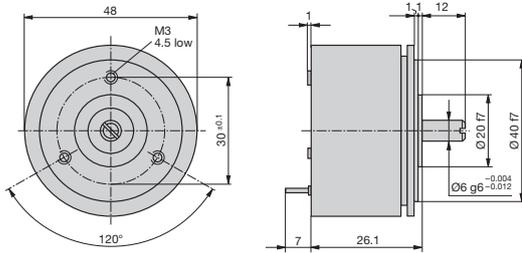


Fig. 10. KINAX 3W2 with special drive shaft at front **only**, Ø 6 mm, length 12 mm.

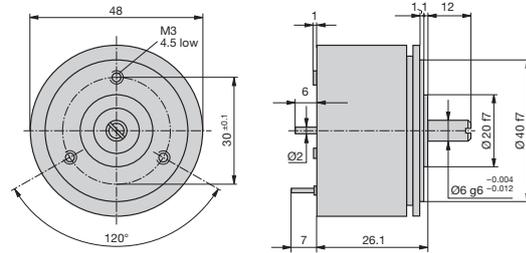


Fig. 11. KINAX 3W2 with special drive shaft at front **and** at rear. At front: Ø 6 mm, length 12 mm. At rear: Ø 2 mm, length 6 mm.

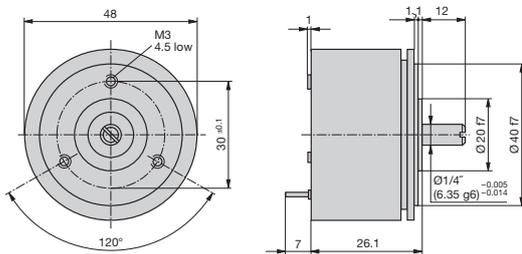


Fig. 12. KINAX 3W2 with special drive shaft at front **only**, Ø 1/4", length 12 mm.

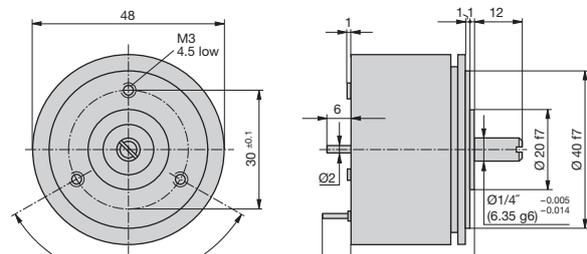


Fig. 13. KINAX 3W2 with special drive shaft at front **and** at rear. At front: Ø 1/4", length 12 mm. At rear: Ø 2 mm, length 6 mm.

12. Declaration of conformity



3W2EX_CE-konf.DOC

Dokument-Nr./
Document No.:

Hersteller/
Manufacturer:
Camille Bauer AG
Switzerland

Anschrift /
Address:
Aargauerstrasse 7
CH-5610 Wohlen

Produktbezeichnung/
Product name:
Messumformer für Drehwinkel
Transmitter for angular position
Typ / Type:
Kinax WT 3W2 EX

Das bezeichnete Produkt stimmt mit den Vorschriften folgender Europäischer Richtlinien überein, nachgewiesen durch die Einhaltung folgender Normen:

The above mentioned product has been manufactured according to the regulations of the following European directives proven through compliance with the following standards:

Nr. / No.	Richtlinie / Directive
2004/108/EG 2004/108/EC	Elektromagnetische Verträglichkeit - EMV-Richtlinie Electromagnetic compatibility - EMC directive
EMV / EMC	Messverfahren / Measurement methods
Störaussendung / Emission	EN 61000-6-4 : 2007+A2:2007
Störfestigkeit / Immunity	IEC 61000-6-2 : 2005 IEC 61000-4-3 : 2006+A1:2007 IEC 61000-4-4 : 2004 IEC 61000-4-6 : 2008

Nr. / No.	Richtlinie / Directive
2006/95/EG 2006/95/EC	Elektrische Betriebsmittel zur Verwendung innerhalb bestimmter Spannungsgrenzen - Niederspannungsrichtlinie - CE-Kennzeichnung : 95 Electrical equipment for use within certain voltage limits - Low Voltage Directive - Attachment of CE marking : 95

EN/Norm/Standard	IEC/Norm/Standard
EN 61010-1: 2001	IEC 61010-1: 2001

Die explosionsgeschützte Ausführung dieses Produkts stimmt mit der Europäischen Richtlinie 94/9/EG überein.

The explosion protected variant of this product has been manufactured according the European directive 94/9.

Wohlen, 12. August 2009

Ort, Datum /
Place, date:

Unterschrift / signature:

M. Ulrich
Leiter Technik / Head of engineering
J. Brem
Qualitätsmanager / Quality manager